

LiteVNA

PRODUCT MANUAL

Based on the v1.4 firmware

Product Informaton

1. Product Name:Vector Network Analyzer

Model:LiteVNA62;LiteVNA64; LiteVNA67

Batch/Serial Number:

2. MANUFACTURER & EU REPRESENTATIVE INFO

Manufacturer: Zhejiang Zhike Technology Co., Ltd.

Address :Qingchuang Zhigu Industrial Park 18-1,Yingchun Road
29, Baihua Shan Industrial,Baiyang Subdistrict,Wuyi
county,Jinhua,Zhejiang,CN(China)

Email :sales06@zeenko.cn

Telephone:+8615160196150

EU Authorized Representative: MJCM SARL

Address:78 avenue des Champs Elysees Bureau 326,PARIS,FR(France)

Email:mjcm190928@gmail.com

Telephone:0033 752907452

Importer: WUYI ZEENKO INDUSTRIAL AND TRADING CO.,LTD.

Address :Qingchuang Zhigu Industrial Park 18-1,Yingchun Road
29, Baihua Shan Industrial,Baiyang Subdistrict,Wuyi
county,Jinhua,Zhejiang,CN(China)

3.Safety & Warnings :

- Please mind potential fire risk and strictly follow the instruction manual for charging and storage. For disposal, please check your local authority's website for more information and dispose of the lithium-ion battery safely in accordance with the applicable legal requirements.
- This device is only charged via USB-C/USB micro port; do not use damaged, frayed, deformed USB cables.
- Never short-circuit the USB port, puncture, squeeze, disassemble or burn the built-in lithium battery.
- Stop charging immediately if the device overheats, emits odd smell, smokes or bulges; cut off USB power and move away from flammables.
- Strictly follow the max RF input power and DC bias limit marked on the panel. Exceed limits instantly burns internal RF receiver chip.
- Never inject high AC/DC voltage directly into RF measurement ports.
- Forbid operation in flammable gas, vapor, dust or explosive atmosphere.

Certificate — Сертификат — 證明書 — 증명서 — شهادة

CE 

 
 **CERTIFICATION MANAGER**
Jul.09, 2026

MAXLAB TESTING CO., LTD.

FCC 



MAXLAB TESTING CO., LTD.



5.Instructions for Use

Table of contents

1.Introduction	2
2.User interface	4
Main screen	4
Menu screen	6
Keypad screen	7
Device settings	8
3.Performing measurements	10
Setting the measurement frequency range	10
Calibration	11
Trace display	13
Markers	15
Time domain operation	16
Recall calibration and settings	20
Saving measurement data with a MicroSD card	20
4.NanoVNA-APP Software	21
User interface	21
Use Zadig to install the USB-CDC driver.	24
5.Appendix– USB data interface	25
Protocol description	25
Host to device command list	26
Register descriptions	27
Register descriptions (DFU mode)	30

1.Introduction

Thank you for your trust and choosing LiteVNA. LiteVNA is a compact, low-cost, portable vector network analyzer (VNA) with an extremely wide measurement range (50kHz–6.3GHz).

In order to minimize power consumption and size, LiteVNA uses only one mixer, which allows S11 and S21 measurements through internal RF switching and can allows TDR and DTF measurements through IFFT calculations.


The preparation of this manual refers to the NanoVNA User Guide of cho45.

LiteVNA Specifications

Parameter	Specification	Conditions
Frequency range	50kHz ~ 6.3GHz	-
System dynamic range	>70dB(HW=v0.3.1 IFBW=2.2kHz) >70dB(HW>=v0.3.2 IFBW=6.7kHz) >90dB(HW=v0.3.1 IFBW=90Hz) >90dB(HW>=v0.3.2 IFBW=225Hz) >100dB(HW >=v0.4.5 IFBW=50Hz)	f < 3GHz, calibrated
	>50dB(HW <=v0.3.2 IFBW=1.1kHz) >70dB(HW =v0.3.3 IFBW=1.1kHz) >80dB(HW >=v0.4.5 IFBW=225Hz)	f >= 3GHz, calibrated
S11 noise floor	< -50dB	f < 3GHz, calibrated
	< -40dB	f >= 3GHz, calibrated
Frequency stability	<0.5ppm	0°C - 50°C
Sweep rate	>1600 points/s(Dual Channel)	HW>=v0.3.2 IFBW=27kHz
Sweep points (on device)	21 ~ 1001 points, adjustable	-
Sweep points (USB)	1 ~ 65535 points, adjustable	-
Power supply	USB, 5V±0.5V 1A MAX	LiteVNA 62/LiteVNA 64
	USB, 5V±0.5V 2.5A MAX	LiteVNA 67
Battery	Li-polymer 3.7V 1500mAh	LiteVNA 62
	Li-polymer 3.7V 2000mAh	LiteVNA 64
	Lithium-ion 3.7V 7500mAh	LiteVNA 67
Operation ambient temperature	-10°C ~ 50°C	The battery performance decreases below 0 °C.
RF connectors	SMA female	LiteVNA 62/LiteVNA 64
	N female	LiteVNA 67
Display	2.8" TFT LCD (320×240)	LiteVNA 62
	3.95" TFT LCD (480×320)	LiteVNA 64
	7" TFT LCD (1024×600)	LiteVNA 67

2. User interface

Main screen

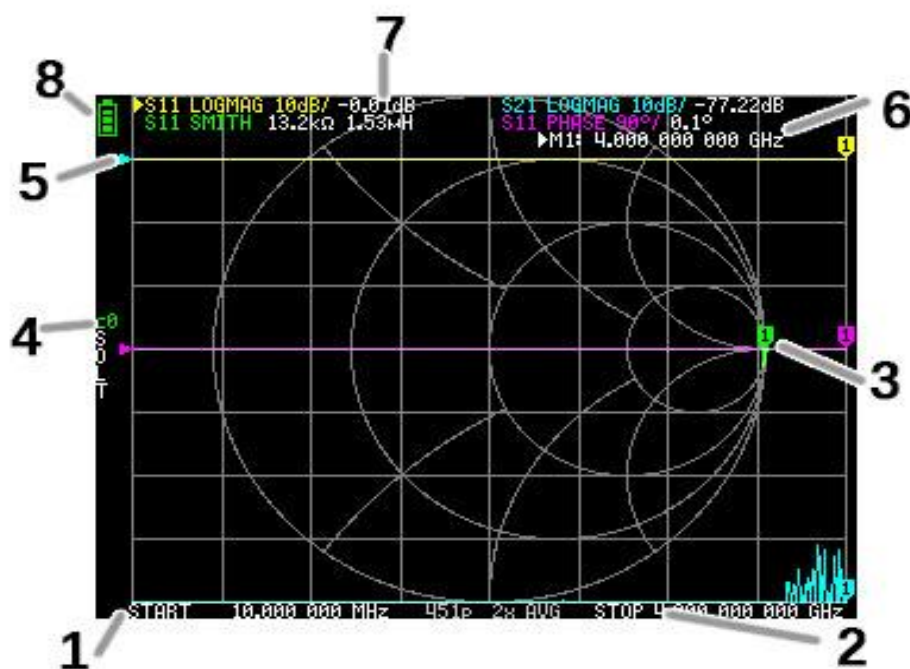

1. START frequency

2. STOP frequency

The START frequency and STOP frequency are shown at the bottom of the display. You can quickly select a frequency by clicking on the start or end frequency, and modify the frequency by moving the Jog switch, and click on the frequency again after selecting it to bring up the on-screen keyboard for quick frequency entry. You can set the frequency in more detail through the menu **Setting the measurement frequency range**.

3. Marker

The marker position for each trace is displayed as a small numbered triangle. The selected marker can be moved to any of the measured points in the following ways:

- Drag a marker on the touch panel , the corresponding trace will also be selected.
- Press and hold the JOG LEFT or JOG RIGHT buttons.

4. Calibration status

Displays the saved slot number of the calibration being used and the error correction applied.
C0 C1...: Each indicates that the corresponding calibration data is loaded.

5. Reference position

Indicates the reference position of the corresponding trace. You can change the position with:

DISPLAY →SCALE →REFERENCE POSITION.

6. Marker status

Displays the selected marker points and the frequency of the marker points.

7. Trace status

The status of each trace format and the value corresponding to the active marker are displayed.

For example, if the display is showing: **S11 LOGMAG 10dB/ 0.02dB** , read it as follows:

Channel S11 (reflection)

Format LOGMAG

Scale is 10dB

Current value is 0.02dB

For the selected trace, the channel name is marked with a triangular shape in front.

8. Battery status

Display the battery voltage, when the icon turns red, please charge as soon as possible, otherwise the battery may enter the protection state, once the battery enters the protection state, you need to charge in the power off state to reactivate the battery.

Menu screen




11. Menu List

The menu can be opened by the following operations:

- When a location other than a marker on the touch screen is tapped.
- When the Jog is pressed.

Keypad screen

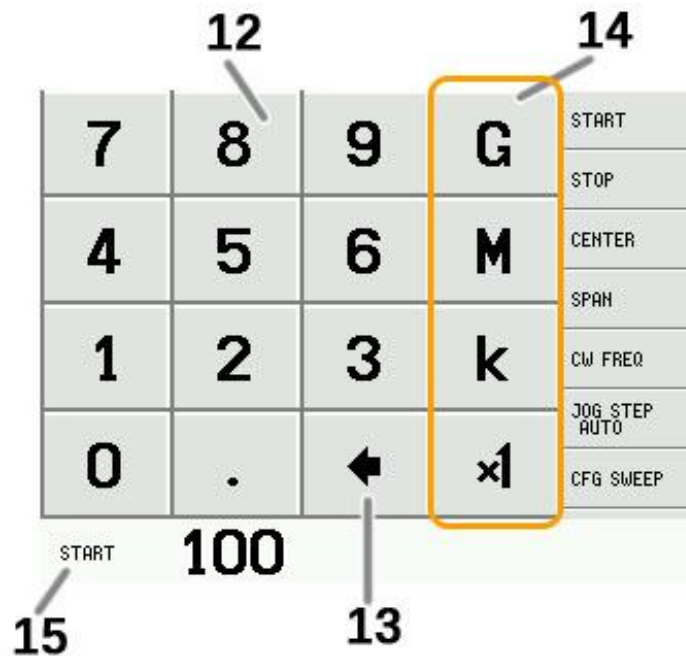

12. Numeric keys

Tap a number to enter one character.

13. Back key

Delete one character. If no character is entered, the entry is canceled and the previous state is restored.

14. Unit key


Multiplies the current input by the appropriate unit and terminates input immediately. In case of $\times 1$, the entered value is set as it is.

15. Input field

The name of the item to be entered and the entered number are displayed.

Device settings

The CONFIG menu contains general settings for the device:

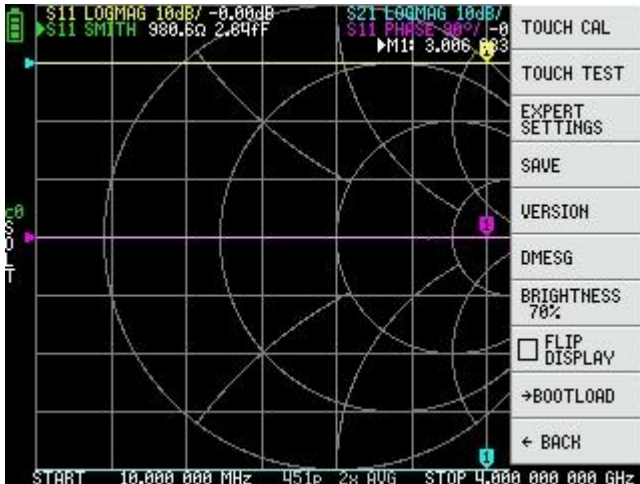

Saving device settings

Select **CONFIG** →**SAVE** to save general instrument settings. General device settings are data that includes the following information:

- Touch screen calibration information
- Brightness

The **CONFIG** →**SAVE** command does not apply to calibration settings.

Display version info

Select **CONFIG** →**VERSION** to display device version information.

LCD Brightness adjustment

Select **CONFIG**→**BRIGHTNESS**, the brightness adjustment interface will pop up, move the joystick left and right to adjust the brightness, press the joystick to exit the brightness adjustment, save the brightness settings by **CONFIG** →**SAVE**.

Firmware update mode

CONFIG→ **BOOTLOAD** then select **RESET AND ENTER** to enter the firmware update mode. You can also press the Jog while powering on to enter the firmware update mode. Then the firmware update prompt will pop up through NanoVNA-APP connected section.

Touch panel calibration and testing


The LiteVNA 62 and LiteVNA 64 use resistive touchscreen, the LCD touch panel can be calibrated using **CONFIG** → **TOUCH CAL** if there is a large difference between the actual on-screen tap position and the recognized tap position. The liteVNA67 uses a capacitive touchscreen and requires no additional calibration.

NOTE: Be sure to save the settings with **CONFIG** → **SAVE**.



You can then test the LCD touch panel stylus tracking accuracy by selecting **CONFIG** → **TOUCH TEST**.

A line is drawn while dragging the stylus along the touch panel. When released from the touch panel, it returns to its original state. Repeat & save the touch screen calibration if tracking is incorrect.

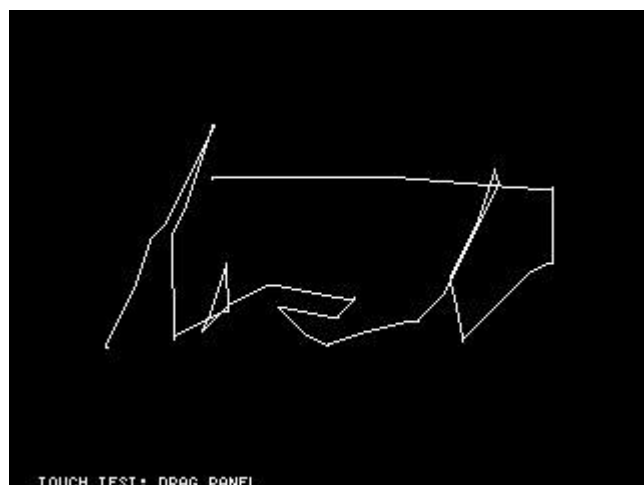


3.Performing measurements

The basic measurement sequence is:

1. Set the frequency range to be measured.
Use **STIMULUS** → **START/STOP** or **STIMULUS** → **CENTER/SPAN**
2. Perform calibration (and save!)
3. Connect the Device Under Test (DUT) and measure.
Note: After modifying the frequency, LiteVNA will calculate the calibration parameters by interpolation, and we still recommend that you re-perform the calibration if you need accurate measurements.

Setting the measurement frequency range

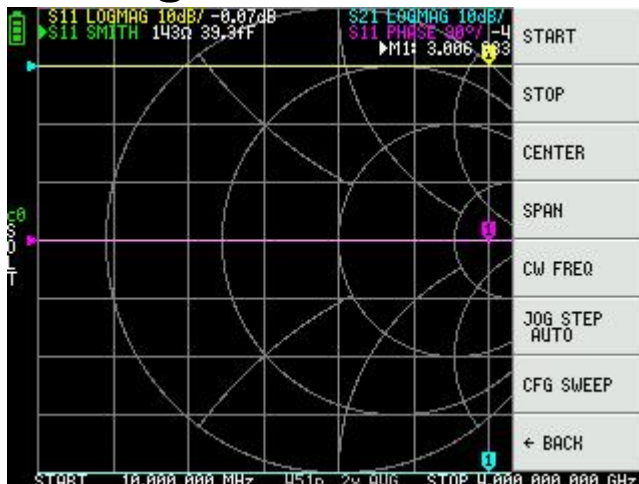

There are three types of measurement range settings.

- Setting the start frequency and stop frequency
- Setting the center frequency and span
- Continuous wave frequency

Setting the start frequency and stop frequency

Select and set **STIMULUS** → **START** and **STIMULUS** → **STOP**, respectively.

Setting the center frequency and span

Select and set **STIMULUS** → **CENTER** and **STIMULUS** → **SPAN**, respectively.

Zero span

Zero span is a mode in which one frequency is sent continuously without frequency sweep.

Select and set **STIMULUS** → **CW FREQ.**

Note that using a single frequency scan will records the reference signal after the first scan is completed, and the internal RF switch can maintain a continuous signal output, which is useful for some situations where a continuous signal output is required.

Temporarily stop measurement

When menu item **PAUSE SWEEP** is active, measurement is temporarily stopped.

Calibration

Calibration is required before you can start using it. LiteVNA will calculate the calibration parameters by interpolation after modifying the measurement frequency, but if you change from a narrower frequency to a wider frequency, the interpolation calculation will no longer be accurate. Due to the errors in the interpolation calculation, it is also recommended that you calibrate first for situations where precise measurements are required.

The coaxial cable connected to the device under test should be connected to the LiteVNA port before calibration. Although LiteVNA provides electrical delay compensation and we provide the best coaxial cable possible, to minimize calibration errors, we recommend that you calibrate at the end as close to the device under test as possible.

The calibration procedure is as follows:

1. Reset current calibration state. Select menu item **CAL** → **RESET** and then → **CALIBRATE**.
2. Connect OPEN standard to port 1 cable and click → **OPEN**. Wait for the current calibration step to be completed, and the cursor will automatically move to the next step.
3. Connect SHORT standard to port 1 cable and click → **SHORT**. Wait for the current calibration step to be completed, and the cursor will automatically move to the next step.

4. Connect LOAD standard to port 1 cable and click →**LOAD**. Wait for the current calibration step to be completed, and the cursor will automatically move to the next step.
5. Connect LOAD standard to port 1 cable and click →**ISOLN**. Wait for the current calibration step to be completed, and the cursor will automatically move to the next step.
6. Connect the THRU standard between the port 1 and port 2 cable ends, and click
→**THRU**. Wait for the current calibration step to be completed, and the cursor will automatically move to the next step.
7. Click →**DONE**.
8. In the pop-up save menu inside choose the location you need to save, save 0 will be automatically called back in the next boot.

- **Power Settings (7-inch liteVNA only)**

In the **CALIBRATE → POWER ATTENUATION** menu, you can set the source output attenuation, with a maximum attenuation value of 31.5 dB. Setting power attenuation reduces the source output power, preventing the receiver from saturating when measuring positive gain. When measuring amplifiers, it is recommended to set the attenuation value to slightly exceed the amplifier's gain. After setting the attenuation, calibration errors may occur due to changes in source matching, so recalibration is required.

Trace display



Up to four traces can be displayed, one of which is the selected trace.

Click on the menu **DISPLAY** → **TRACES** → **TRACES n** to select a trace, and click again to turn a trace on or off.

The selected trace will be marked with a tick in front of its menu item and with a triangle in front of the trace name in the main screen.

Trace format

Although each trace can have its own displayed format, you can only change the format of the active trace.

To assign a format, set the trace to active (see above) then select: **DISPLAY**

→**FORMAT** The description and unit of measurement of each format is as follows:


- **LOGMAG** : Logarithm of absolute value of measured value (dB per div)
- **PHASE** : Phase in the range of -180 ° to + 180 ° (90 degree default)
- **DELAY** : Delay (pico or nano seconds)
- **SMITH** : Smith Chart (Impedance scale is normalized during calibration)
- **SWR** : Standing Wave Ratio
- **POLAR** : Polar coordinate format (Impedance scale is normalized during calibration)
- **LINEAR** : Absolute value of the measured value
- **REAL** : Real part of measured S parameter
- **IMAG** : Imaginary part of measured S parameter
- **RESISTANCE** : Resistance component of the measured impedance (ohms per div)
- **REACTANCE** : Reactance component of the measured impedance (ohms per div)

Trace channel

LiteVNA is a switch-switched T/R VNA that measures S11 (reflection, return loss) and S21 (transmission, insertion loss).

Each trace can be set the measurement channel by clicking on the menu **Display → Channel**.

Markers

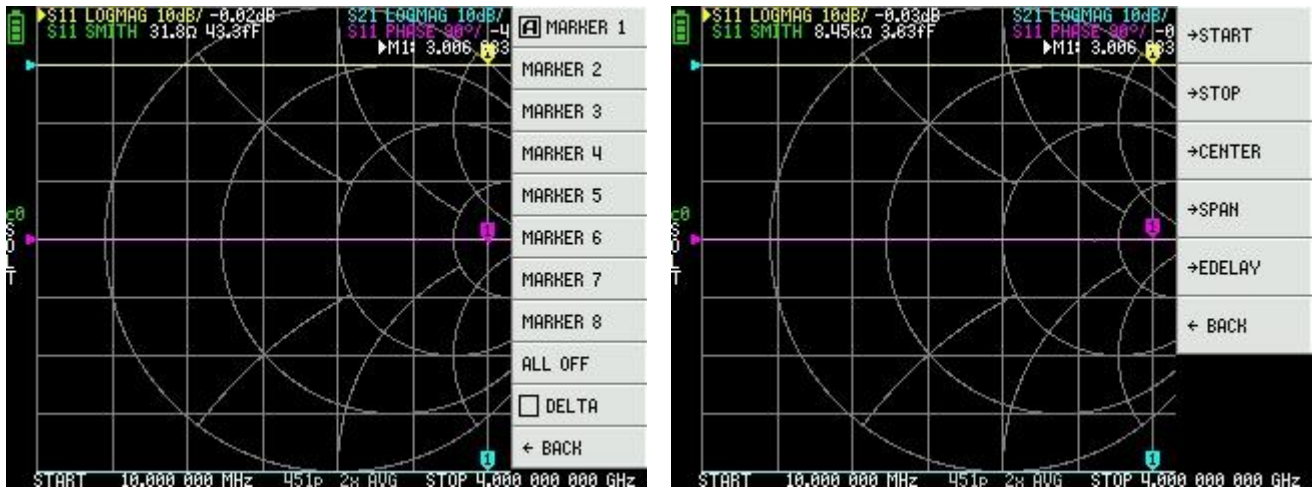

Up to 8 markers can be displayed.

Markers are selected by the menu items **MARKER** → **SELECT MARKER** → **MARKER n**.

Clicking on a disabled marker menu item enables it and makes it active. Clicking on an enabled but non-active marker activates it. Clicking on the currently active marker disables it.

Setting frequencies from marker(s)

You can set the frequency range from the **MARKER** → **OPERATIONS** menu as follows:

- **OPERATIONS** → **START** - Sets the start frequency to the active marker's frequency.
- **OPERATIONS** → **STOP** - Sets the stop frequency to the active marker's frequency.
- **OPERATIONS** → **CENTER** - Sets the frequency of the active marker to be the center frequency.
- **OPERATIONS** → **SPAN** - Sets the absolute frequency span to the last two active markers. You need to have any two markers (M1-M8) enabled for the Span button to work. If only one marker is displayed, nothing happens.

Time domain operation

The LiteVNA can simulate time domain reflectometry by transforming frequency domain data.

Select **DISPLAY** → **TRANSFORM** → **TRANSFORM ON** to convert measured data to the time domain.

If **TRANSFORM ON** is enabled, the measurement data is immediately converted to the time domain and displayed. The relationship between the time domain and the frequency domain is as follows.

- Increasing the maximum frequency increases the time resolution
- The shorter the measurement frequency interval (ie, the lower the maximum frequency), the longer the maximum time length

For this reason, the maximum time length and time resolution are in a trade-off relationship. In other words, the time length is the distance.

- If you want to increase the maximum measurement distance, you need to lower the frequency spacing (frequency span / sweep points).
- If you want to measure the distance accurately, you need to increase the frequency span.

HINT – Use a lower frequency to measure a longer length and a higher frequency to measure a shorter length and adjust accordingly for accurate results.

Time domain bandpass

In bandpass mode, you can simulate the DUT response to an impulse signal.

NOTE: The trace format can be set to **LINEAR**, **LOGMAG** or **SWR**.

The following is an example of the impulse response of a bandpass filter.




Time domain low pass impulse

In low-pass mode, you can simulate TDR. In low-pass mode, the start frequency must be set to 50 kHz, and the stop frequency must be set according to the distance to be measured.

The trace format can be set to **REAL**.

Examples of Impulse response in open state and impulse response in short state are shown below.

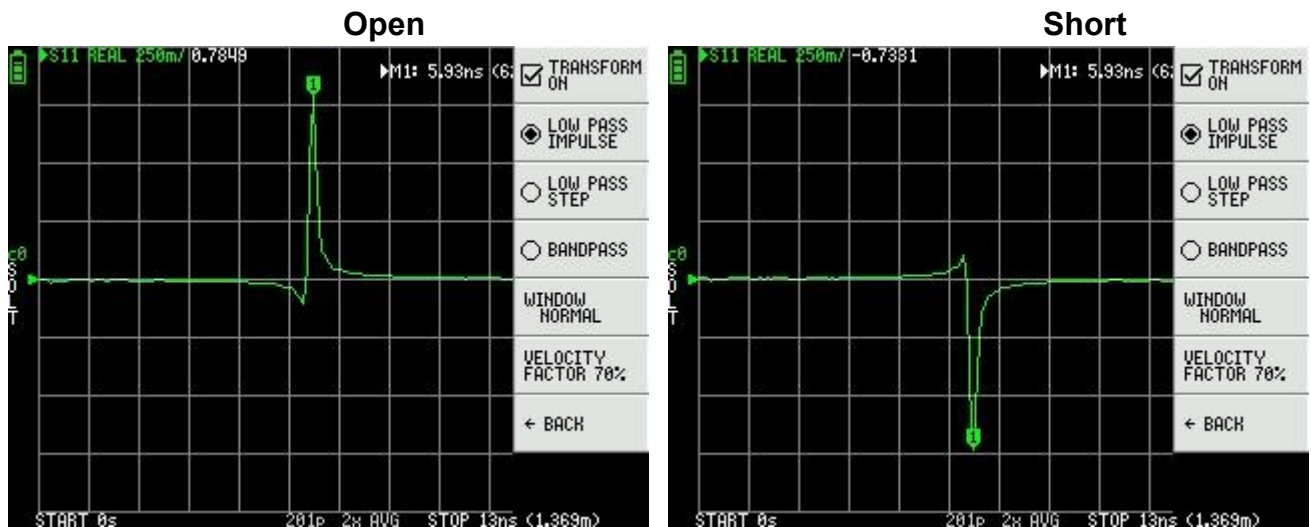


Time domain low pass step


The trace format can be set to **REAL**.

Example measurements of Step response are shown below.

Open

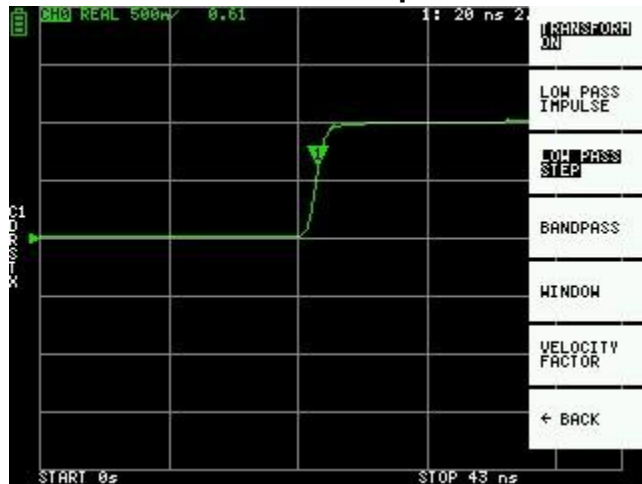


Short

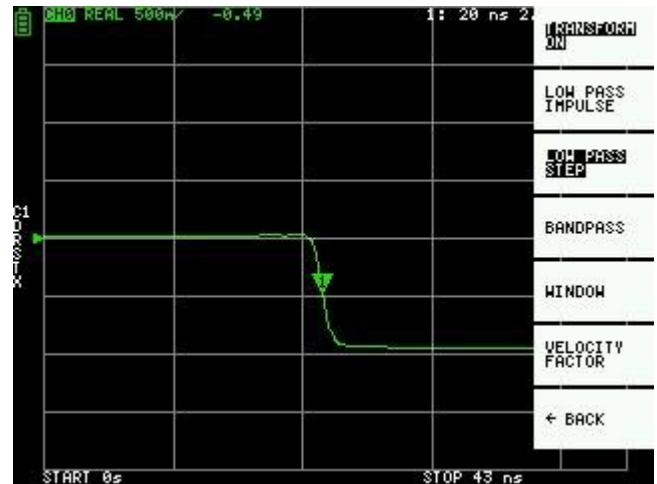


Capacitive short




Inductive short

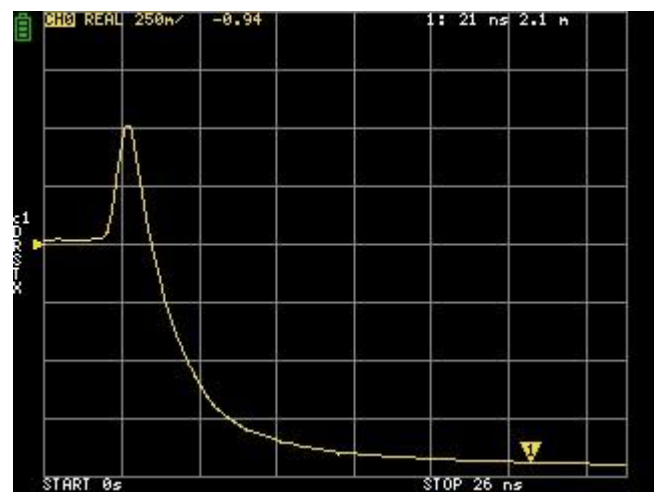

Capacitive discontinuity (C in parallel)

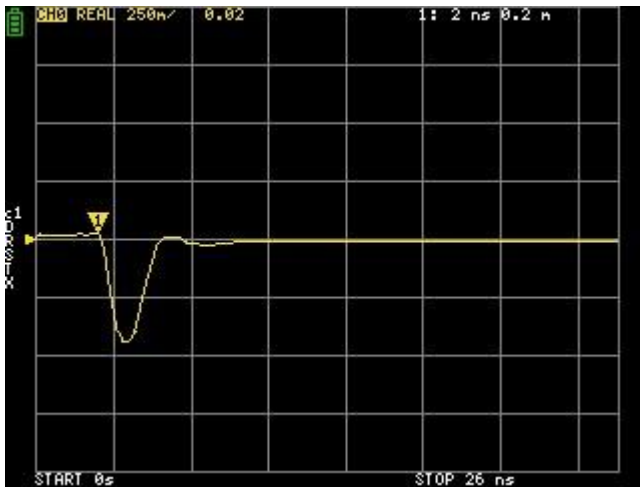

Inductive discontinuity (L in series)

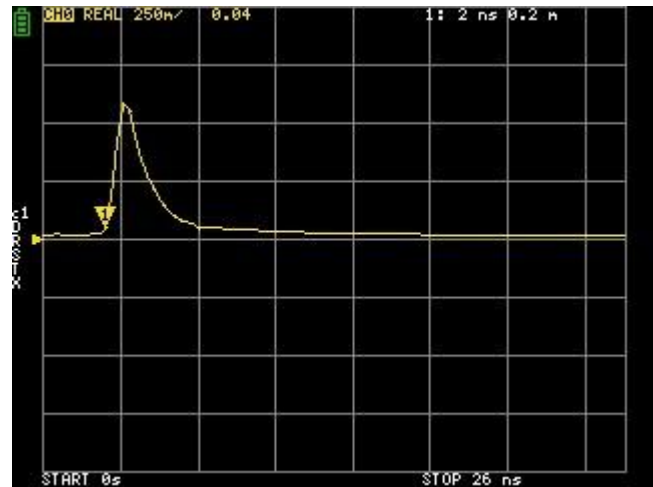

Time domain window

The range that can be measured is a finite number, and there is a minimum frequency and a maximum frequency. A window can be used to smooth out this discontinuous measurement data and reduce ringing.

There are three levels of windowing.

- **MINIMUM** (no window, ie: same as rectangular window, highest resolution)
- **NORMAL** (equivalent to Kaiser window = 6β)
- **MAXIMUM** (equivalent to Kaiser window = 13β , highest dynamic range)

Setting the velocity factor in the time domain

The transmission speed of electromagnetic waves in the cable varies depending on the material. The ratio to the transmission speed of electromagnetic waves in vacuum is called the Velocity Factor. This is always stated in the cable specifications.

In the time domain, the displayed time can be converted into distance. The wavelength shortening ratio used for distance display can be set with **DISPLAY** → **TRANSFORM** → **VELOCITY FACTOR**.

For example, if you measure the TDR of a cable with a wavelength reduction rate of 67%, specify **67** for the **VELOCITY FACTOR**. (Do not use the decimal point).

Recall calibration and settings

Up to 7 calibration datasets can be saved. LiteVNA automatically loads data with recall 0 when it starts.


Calibration data includes the following information:

- Frequency range setting
- Error correction at each measurement point
- Trace settings
- Marker settings
- Domain mode settings
- Electrical delay

You can save the current settings by selecting **CAL** → **SAVE** → **SAVE n**.

Current calibration data can be reset by selecting **CAL** → **RESET**.

CAL → **CORRECTION** indicates whether error correction is currently enabled. You can deselect this to temporarily disable error correction.

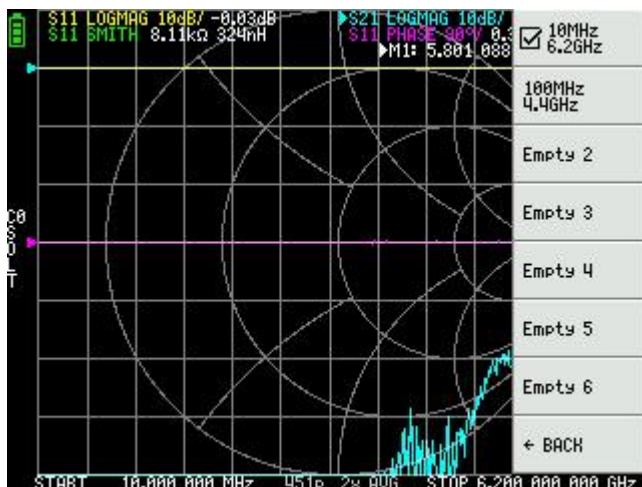

Saving measurement data with a MicroSD card


You can use a MicroSD card to save measurement data in SNP format or to save screenshots in BMP format. MicroSD card uses SPI mode and only supports smaller than 32GB and formatted with FAT or FAT32.

Click on **SD CARD** in the main menu to open the Save menu..

4.NanoVNA-APP Software

The current version of LiteVNA uses the same communication protocol as SAA2 to ensure good compatibility with NanoVNA-APP.

User interface

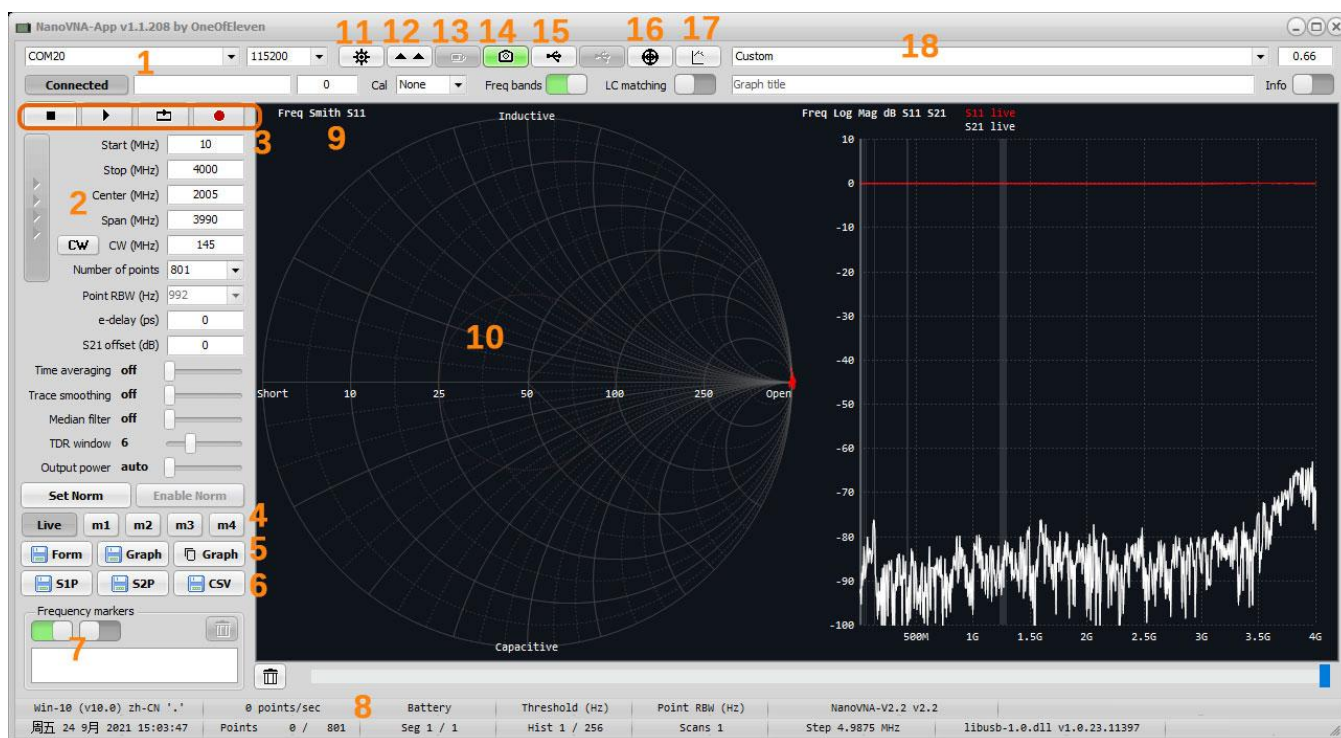

1. COM port

Select the COM port to connect LiteVNA. When the connection status shows Connected, it means LiteVNA is connected, click Connected to disconnect, click Disconnected to reconnect. The serial port baud rate does not work when connecting via USB port.

2. Stimulus setting area

Used to set scanning parameters, including scanning frequency, scanning points, etc.

3. Scanning control

Click  to stop scanning, click  single scan, click  for continuous scanning, click  to automatically record S2P files after each scan is completed.

4. Trace setting

In addition to displaying real-time scanned traces, you can also display multiple stored traces and right-click the corresponding button to import the SNP file you need to display.

5. Save image

Click to save the current window or the current trace display window, or to copy the trace window to the clipboard.

6. Export Data

Click to export the data in SNP or CSV format.

7. Marker point data

To display the marker point data, you can add or remove marker points by double-clicking the left mouse button in the right trace window or by clicking the right mouse button in the trace window and the pop-up menu appears.

8. Status Bar

Shows some settings and working status.

9. Trace format

Show the current trace format, click to select the trace format.

10. Trace window

Show the trace, right mouse click can pop up the trace setting menu. Roll the mouse wheel in the upper part of the left axis or hold down the left button to drag to modify the maximum value of the axis, roll the mouse wheel in the middle of the left axis to modify the scale of the axis, hold down the left button in the middle of the left axis to drag to move the axis as a whole, and roll the mouse wheel in the lower part of the left axis or hold down the left button to drag to modify the minimum value of the axis.

11. Settings button

Click to open the settings window.

12. Update firmware

LiteVNA determines whether it needs to enter update mode through the communication protocol, the button does not work when LiteVNA is connected. If you need to update the firmware of LiteVNA, you need to press and hold the rocker switch of LiteVNA, then turn on the power, LiteVNA will enter the update mode, the screen will remain black, then connect through NanoVNA-APP, the update firmware prompt will pop up, click "Yes" to enter the firmware update interface.

13. Battery Status

The current LiteVNA communication protocol does not support passing battery information at this time.

14. Screenshot button

Click to capture LiteVNA's screen image.

15. Communication Monitoring

Click to open the communication monitoring window, you can view or send some debugging information

16. Calibration Button

Click to open the calibration interface, the calibration process is similar to calibrating directly with LiteVNA, and you can save the calibration data after the calibration is completed. You can also load the calibration data. Note that if you need to use the calibration of NanoVNA-APP, it is recommended that you reset the calibration on LiteVNA first in order to ensure the measurement accuracy.

17. Separate trace window

Click to bring up a separate trace window, and you can create multiple separate trace windows.

18. Time domain velocity factor


Used to set the TDR velocity factor, some common cable factors are built in and can be selected via the drop-down menu.

Use Zadig to install the USB-CDC driver.


Windows 10 and above operating systems can automatically recognize USB-CDC devices, so connecting LiteVNA on windows 10 and above operating systems can automatically recognize COM ports.

If you are using an older windows system, or if LiteVNA is recognized as the wrong device, you can use Zadig to install the driver.

In Zadig's Options menu, enable List All Devices.

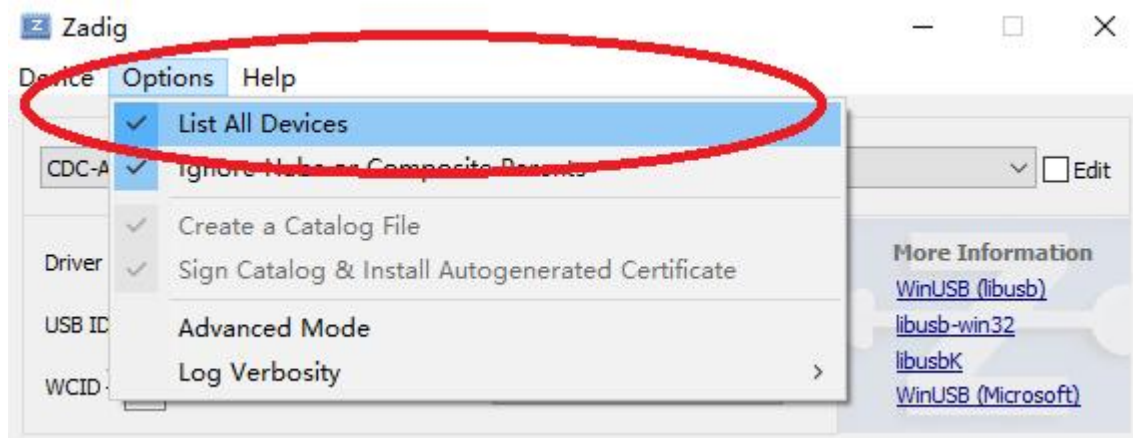

1. Select CDC-ACM Demo in the drop-down box of the device list.
2. Select USB Serial (CDC) inside the driver selection box.
3. Click Replace Driver (or Install Driver) to install the driver.

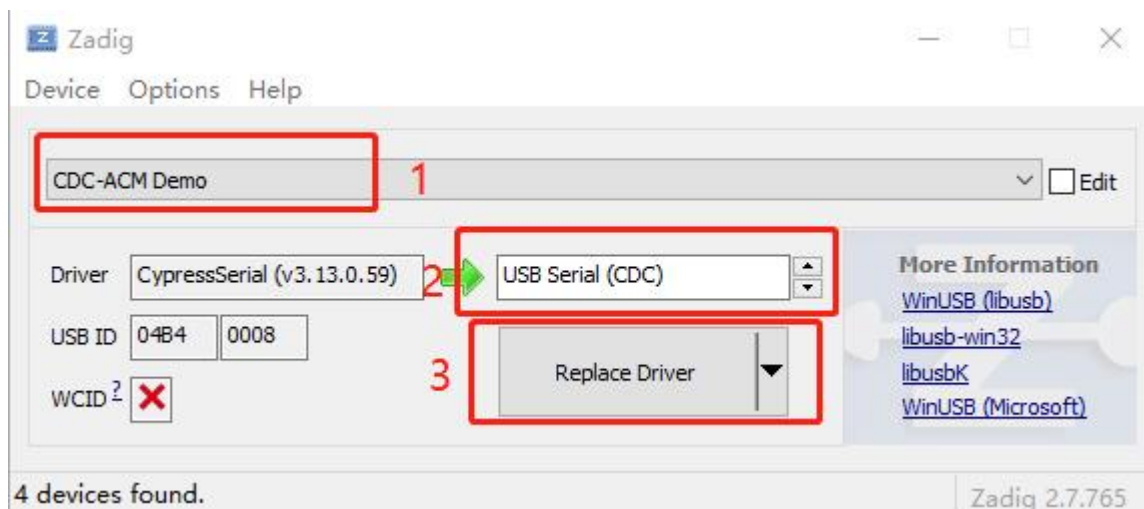

Check in the Device Manager if the COM port is already displayed.

5. Appendix– USB data interface

To ensure compatibility with current PC software, LiteVNA uses the same data communication protocol as SAA2, appears as a USB CDC (Communications Device Class) virtual serial port both during normal operation and in DFU mode. PC software can issue commands and request data by sending and receiving data on the virtual serial port. Communications protocol is identical in the two cases, with only register layouts differing.

Protocol description

Only the host may initiate commands by sending one or more bytes on the virtual serial port. Each command may have a different length. There is no separator delimiting each command. The device may not send data to the host except for replies to a host-to-device command.

The following table lists all supported commands and their byte encodings, and is applicable both during normal operation and in DFU mode.

Host to device command list

All byte values in the table are in hexadecimal. B0 to B5 denote bytes 0 to 5. B0 is the opcode.

B0	B1	B2	B3	B4	B5	Name	Description
00	-	-	-	-	-	NOP	No operation
0d	-	-	-	-	-	INDICATE	Device always replies with ascii '2' (0x32)
10	(AA)	-	-	-	-	READ	Read a 1-byte register at address AA. Reply is one byte, the read value.
11	(AA)	-	-	-	-	READ2	Read a 2-byte register at address AA. Reply is 2 bytes, the read value.
12	(AA)	-	-	-	-	READ4	Read a 4-byte register at address AA. Reply is 4 bytes, the read value.
18	(AA)	(NN)	-	-	-	READFIFO	Read NN values from a FIFO at address AA. Reply is the read values in order. Each value can be more than one byte and is determined by the FIFO being read.
20	(AA)	(XX)	-	-	-	WRITE	Write XX to a 1-byte register at address AA. There is no reply.
21	(AA)	(X0)	(X1)	-	-	WRITE2	Write X0 to AA, then X1 to AA+1. There is no reply.
22	(AA)	(X0)	(X1)	(X2)	(X3)	WRITE4	Write X0..X3 to registers starting at AA. There is no reply.
23	(AA)	(X0)	(X1)	(X2)	...	WRITE8	This command is 10 bytes in total. Bytes 2..9 correspond to X0..X7. Write X0..X7 to registers starting at AA. There is no reply.
28	(AA)	(NN)	...			WRITEFIFO	Write NN bytes into a FIFO at address AA. NN bytes of data to be written into the FIFO should follow "NN". There is no reply.

Register descriptions

The following table lists all registers accessible during normal operation.

All addresses are in hexadecimal.

Multi-byte integer registers are encoded in Little Endian. Lowest numbered registers contain the least significant portions of the integer.

Address	Name	Description
00..07	sweepStartHz	Sets the sweep start frequency in Hz. uint64 .
10..17	sweepStepHz	Sets the sweep step frequency in Hz. uint64 .
20..21	sweepPoints	Sets the number of sweep frequency points. uint16 .
22..23	valuesPerFrequency	Sets the number of data points to output for each frequency. uint16 .
26	rawSamplesMode	mode (0 - USB mode, 1 - send raw data, 2 - normal mode, 3 - send calibrated data). uint8 .
30	valuesFIFO	get data points count (byte limit to 255, but for Lite possible set to 0 for get all measured points from point count). uint8 .
40	Average	Set the average multiplier (FFT sample point multiplier, which actually changes the IFBW). Allowable range 1-80 (0x01-0x50). uint8 .
41	LowFrequencyPower	Set the power of the low frequency signal generator (MS5351), default value 0x01, setting range 0x01-0x03. uint8 .
42	HighFrequencyPower	Set the power of the High frequency signal generator (MAX2871), default value 0x03, setting range 0x01-0x03. uint8 .
44	ChannelSelect	Select the channel to scan, single channel scanning is faster, the closed channel returns invalid values. 0x01 S11, 0x02 S21, 0x00 S11 and S21. uint8 .
58	UnixTime	Set the system time for liteVNA. Use 4 bytes to send Unix Timestamp. uint32 .
5C	battery value	read battery value in millivolts. uint16 .
EE	screenshot	any value, liteVNA will send screenshot. uint8 .
f0	deviceVariant	The type of device this is. Always 0x02 for liteVNA.

f1	protocolVersion	Version of this wire protocol. Always 0x01.
f2	hardwareRevision	Hardware revision.
f3	firmwareMajor	Firmware major version.
f4	firmwareMinor	Firmware minor version.

Remarks **sweepStartHz**, **sweepStepHz**, and **sweepPoints** together set the sweep parameters of the VNA.

Writing any value to these registers will immediately terminate the on-device UI and put the device in “USB data mode”, where the PC has full control over VNA operation.

You can not observe user entered sweep parameters (from the device UI) by reading these registers.

Sweep is always running and can not be paused.

Example:

Set "average = 5" command:

20 - write byte

40 - address (average)

05 - value

Need send : 204005

Example read data:

tx: setting scan parameters

20 30 00 - (set point count as 0, all points)

23 00 10 27 00 00 00 00 00 00 - write start = 10000

23 10 C7 03 00 00 00 00 00 00 - write stop = 1000000

21 20 00 04 - points count 0x400 = 1024

21 22 01 00 - values per freq = 1

requesting 1024 points ..

18 30 FF - read 255

18 30 FF - read 255

18 30 FF - read 255

18 30 FF - read 255

18 30 04 - read 4

FIFO data format

The values read from **valuesFIFO** are 32 bytes each. The following table lists the fields in each value. All byte offsets are in hexadecimal. All multi-byte integers are encoded in Little Endian. Lowest numbered bytes contain the least significant portions of the integer.

Bytes	Name	Description	Type
00..03	fwd0Re	Real part of channel 0 outgoing wave.	int32
04..07	fwd0Im	Imaginary part of channel 0 outgoing wave.	int32
08..0b	rev0Re	Real part of channel 0 incoming wave.	int32
0c..0f	rev0Im	Imaginary part of channel 0 incoming wave.	int32
10..13	rev1Re	Real part of channel 1 incoming wave.	int32
14..17	rev1Im	Imaginary part of channel 1 incoming wave.	int32
18..19	freqIndex	Frequency index, 0 to sweepPoints - 1.	uint16
1a..1f	(reserved)	(reserved)	-

valuesFIFO is continuously being filled with new sweep data regardless of whether it is being read.

If you wish to do on-demand sweeps, it is necessary to clear stale data before reading from the FIFO. The FIFO can be cleared by writing (with the **WRITE** command) any value to the FIFO address.

valuesFIFO returns raw values representing the in-phase and quadrature part of the measured waves, which never have user calibration applied. You can not access the on-device user calibrations or calibrated data over USB.

fwd0Re/fwd0Im is referred to as the reference channel. All complex values read from **valuesFIFO** can be at a random phase, so you must divide (using complex division) each value by the reference channel to get absolute phase and magnitude values.

Register descriptions (DFU mode)

The following table lists all registers accessible in DFU mode.

All addresses are in hexadecimal.

Multi-byte integer registers are encoded in Little Endian. Lowest numbered registers contain the least significant portions of the integer.

Address	Name	Description
e0..e3	flashWriteStart	Current flash write address. uint32 . Set this to the address to start writing at.
e4	flashFIFO	Writing to this FIFO will write data into flash starting at flashWriteStart . flashWriteStart will be incremented by the number of bytes written.
e8..eb	userArgument	The user argument to pass to the program upon soft reset. uint32 .
ef	doReboot	Write 0x5e to initiate a soft reset.
f0	deviceVariant	The type of device this is. Always 0x02 for LiteVNA.
f1	protocolVersion	Version of this wire protocol. Always 0x01.
f2	hardwareRevision	Hardware revision. Always 0x00 in DFU mode.
f3	firmwareMajor	Firmware major version. Always 0xff in DFU mode.
f4	firmwareMinor	Firmware minor version (of the bootloader).

Writing to flash

The procedure to write a new firmware image to flash are as follows.

1. Connect the device to the PC over USB and put the device into DFU mode.
2. Open the virtual serial port in raw mode (platform specific).
3. Write the address you wish to start flashing from to **flashWriteStart**.
4. Use the **WRITEFIFO** command to send up to 255 bytes at a time to **flashFIFO**.
Each **WRITEFIFO** command can be followed with a **INDICATE** command, which will reply with '2' only after the flash operation is complete.
There is no flow control on the virtual serial port and you must limit the amount of outstanding writes to no more than 2048 bytes.
5. (Optional) Write 0x5e to **doReboot** to soft reset the device.

Warning 1 : The RF chip and internal signal circuit of this device are highly sensitive to static electricity. You must wear an anti-static wrist strap before operation. Do not touch the inner metal pin of SMA port directly with fingers. Discharge human static electricity before touching the instrument in dry and low-temperature environment. Damage to RF chip caused by static breakdown is not covered by warranty.

Warning 2 : External high-power RF signals are prohibited from being input.